

**Headlight Switch E-Bike
Function Switch (S1)**

For E1 / E2 / E4 / E6
Part No. : 2B4020101



**Switch Button E-Bike
Power Switch (S2) For E3**

Part No. : 2B4020102



Electric Bike Switch (S3)

Part No. : 2B4020103



Electric Bike Switch (S4)

Part No. : 2B4020104



Multifunction Switch (S5)

Part No. : 2B4020105




**On & Off Switch 12V
(S6-Blue)**

Part No. : 2B4020106



3-segment Switch (S7)

Part No. : 2B4020107

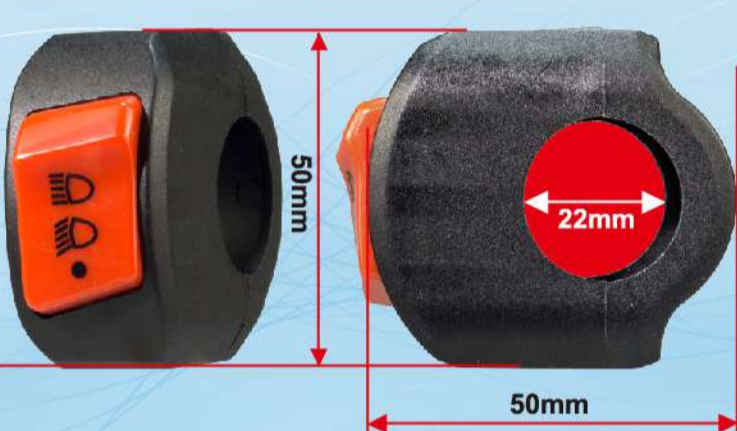

On & Off Switch (S8)

Part No. : 2B4020108



Multifunction Switch(S9)

Part No. : 2B4020109



Multifunction Switch (S10)

Part No. : 2B4020110



Multifunction Switch (S11)

Part No. : 2B4020111



Multifunction Switch (S12)

Part No. : 2B4020112



Multifunction Switch (S13)

Part No. : 2B4020113



E-MARK Electric Bike Horn

Part No. : 2B4020201

**Ø2.6 inch
105 dB**

